

# ORDERING REPLACEMENT PARTS

If you encounter any difficulties or problems with this product, contact the ICON Fitness Lifestyle Ltd. office, or write:

ICON Fitness Lifestyle Ltd.  
Greenwich House  
223 North Street  
Sheepscar  
Leeds LS7 2AA

Tel: Country Code: 0345-089009  
Fax: 0113-2411120

To help us assist you, please be prepared to give the following information:


- The MODEL NUMBER of the product (PETL21462).
- The NAME of the product (PROFORM CROSSWALK® csi treadmill).
- The SERIAL NUMBER of the product (see the front cover of this manual).
- The KEY NUMBER of the part(s) (see the EXPLODED DRAWING and the PART LIST attached to the centre of this manual).
- The DESCRIPTION of the part(s) (see the EXPLODED DRAWING and the PART LIST attached to the centre of this manual).

If possible, place the treadmill near your telephone for easy reference when calling.



Model No. PETL21462

Serial No. \_\_\_\_\_

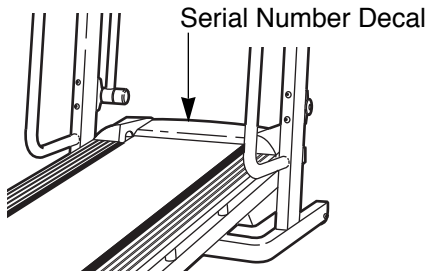

## QUESTIONS?


As a manufacturer, we are committed to providing complete customer satisfaction. If you have questions, or find that there are missing or damaged parts, we will guarantee you complete satisfaction through our Customer Service Department.

Please CALL:  
0345-089009

Or WRITE:  
ICON Fitness Lifestyle Ltd.  
Greenwich House  
223 North Street  
Sheepscar  
Leeds LS7 2AA

## CAUTION

Read all precautions and instructions in this manual before using this equipment. Save this manual for future reference.

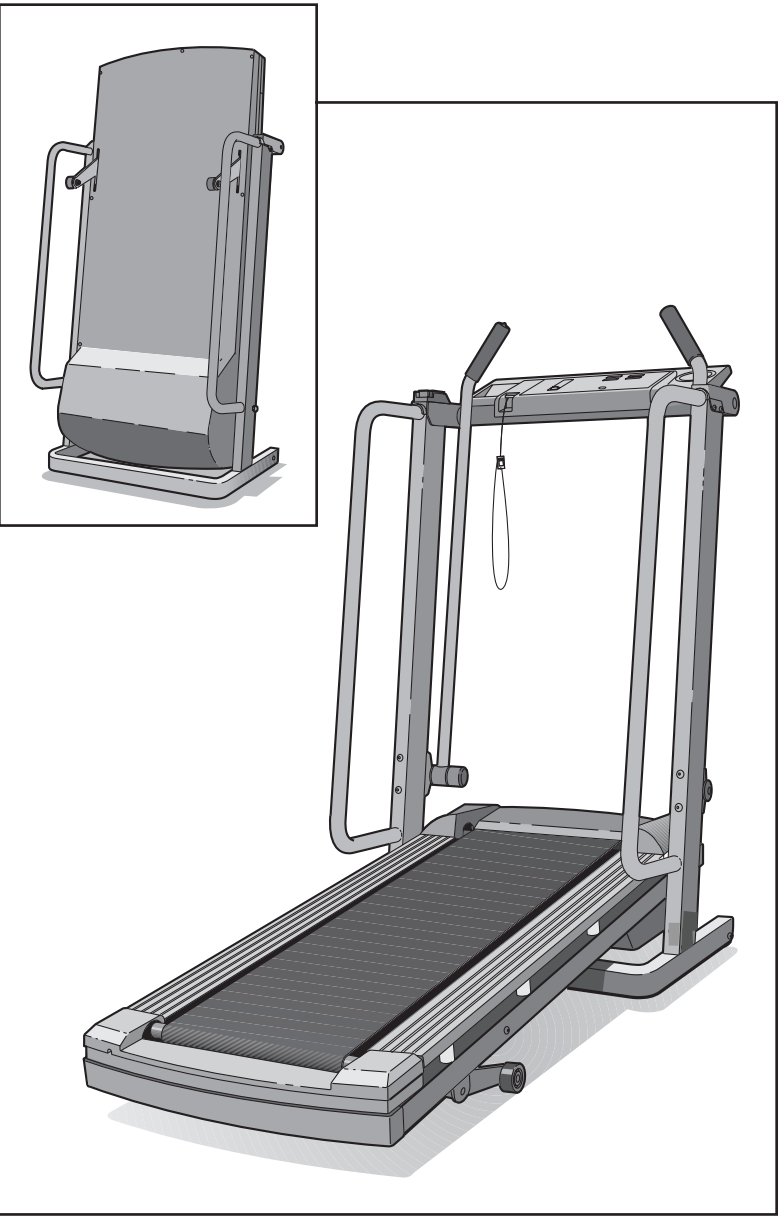


# USER'S MANUAL

TABLE OF CONTENTS

IMPORTANT PRECAUTIONS . . . . .2  
BEFORE YOU BEGIN . . . . .4  
ASSEMBLY . . . . .5  
OPERATION AND ADJUSTMENT . . . . .7  
HOW TO FOLD AND MOVE THE TREADMILL . . . . .11  
TROUBLE-SHOOTING . . . . .12  
CONDITIONING GUIDELINES . . . . .14  
ORDERING REPLACEMENT PARTS . . . . .Back Cover

Note: An EXPLODED DRAWING and a PART LIST are attached to the centre of this manual. Save the EXPLODED DRAWING and PART LIST for future reference.

IMPORTANT PRECAUTIONS

**WARNING:** To reduce the risk of burns, fire, electric shock, or injury to persons, read the following important precautions and information before operating the treadmill.

1. It is the responsibility of the owner to ensure that all users of this treadmill are adequately informed of all warnings and precautions.

2. Use the treadmill only as described.

3. Place the treadmill on a level surface, with 2 m (8 feet) of clearance behind it. Do not place the treadmill on a surface that blocks any air openings. To protect the floor or carpet from damage, place a mat under the treadmill.

4. Keep the treadmill indoors, away from moisture and dust. Do not put the treadmill in a garage or covered patio, or near water.

5. Do not operate the treadmill where aerosol products are used or where oxygen is being administered.

6. Keep children and pets away from the treadmill at all times.

7. The treadmill should be used only by persons weighing 115 kg (250 lbs) or less.

8. Never allow more than one person on the treadmill at a time.

9. Wear appropriate clothing when using the treadmill. Do not wear loose clothing that could become caught in the treadmill. Athletic support clothes are recommended for both men and women. Always wear athletic shoes. Never use the treadmill with bare feet, wearing only stockings, or in sandals.

10. When connecting the power cord (see HOW TO PLUG IN THE POWER CORD on page 7), plug the power cord on earth circuit capable of carrying 8 or more amps. No other appliance should be on the same circuit.

11. If an extension cord is needed, use only a 14-gauge general-purpose three cord of cable of 1,5 meters (5 feet) or less in length.

12. Keep the power cord away from heated surfaces.

13. Never move the walking belt whilst the power is turned off. Do not operate the treadmill if the power cord or plug is damaged, or if the treadmill is not working properly. (See BEFORE YOU BEGIN on page 4 if the treadmill is not working properly.)

14. Never start the treadmill whilst you are standing on the walking belt. Always hold the handrails or upper body arms whilst using the treadmill.

15. The treadmill is capable of high speeds. Adjust the speed in small increments to avoid sudden jumps in speed.

16. To reduce the possibility of the treadmill overheating, do not operate the treadmill continuously for longer than 1 hour.

17. The pulse sensor is not a medical device. Various factors, including the user's movement, may affect the accuracy of heart rate

Training Zone Exercise

After warming up, increase the intensity of your exercise until your pulse is in your training zone for 20 to 60 minutes. (During the first few weeks of your exercise program, do not keep your pulse in your training zone for longer than 20 minutes.) Breathe regularly and deeply as you exercise—never hold your breath.

Cool-down

Finish each workout with 5 to 10 minutes of stretching

to cool down. This will increase the flexibility of your muscles and will help to prevent post-exercise problems.

Exercise Frequency

To maintain or improve your condition, complete three workouts each week, with at least one day of rest between workouts. After a few months, you may complete up to five workouts each week if desired.

The key to success is to make exercise a regular and enjoyable part of your everyday life.

SUGGESTED STRETCHES

The correct form for several basic stretches is shown in the drawings below. Move slowly as you stretch—never bounce.

1. Toe Touch Stretch

Stand with your knees bent slightly and slowly bend forward from your hips. Allow your back and shoulders to relax as you reach down toward your toes as far as possible. Hold for 15 counts, then relax. Repeat 3 times. Stretches: Hamstrings, back of knees and back.

2. Hamstring Stretch

Sit with one leg extended. Bring the sole of the opposite foot toward you and rest it against the inner thigh of your extended leg. Reach toward your toes as far as possible. Hold for 15 counts, then relax. Repeat 3 times for both legs. Stretches: Hamstrings, lower back and groin.

3. Calf/Achilles Stretch


With one leg in front of the other, reach forward and place your hands against a wall. Keep your back leg straight and your back foot flat on the floor. Bend your front leg, lean forward and move your hips toward the wall. Hold for 15 counts, then relax. Repeat 3 times for both legs. To cause further stretching of the achilles tendons, bend your back leg as well. Stretches: Calves, achilles tendons and ankles.

4. Quadriceps Stretch


With one hand against a wall for balance, reach back and grasp one foot with your other hand. Bring your heel as close to your buttocks as possible. Hold for 15 counts, then relax. Repeat 3 times for both legs. Stretches: Quadriceps and hip muscles.

5. Inner Thigh Stretch

Sit with the soles of your feet together and your knees outward. Pull your feet toward your groin area as far as possible. Hold for 15 counts, then relax. Repeat 3 times. Stretches: Quadriceps and hip muscles.

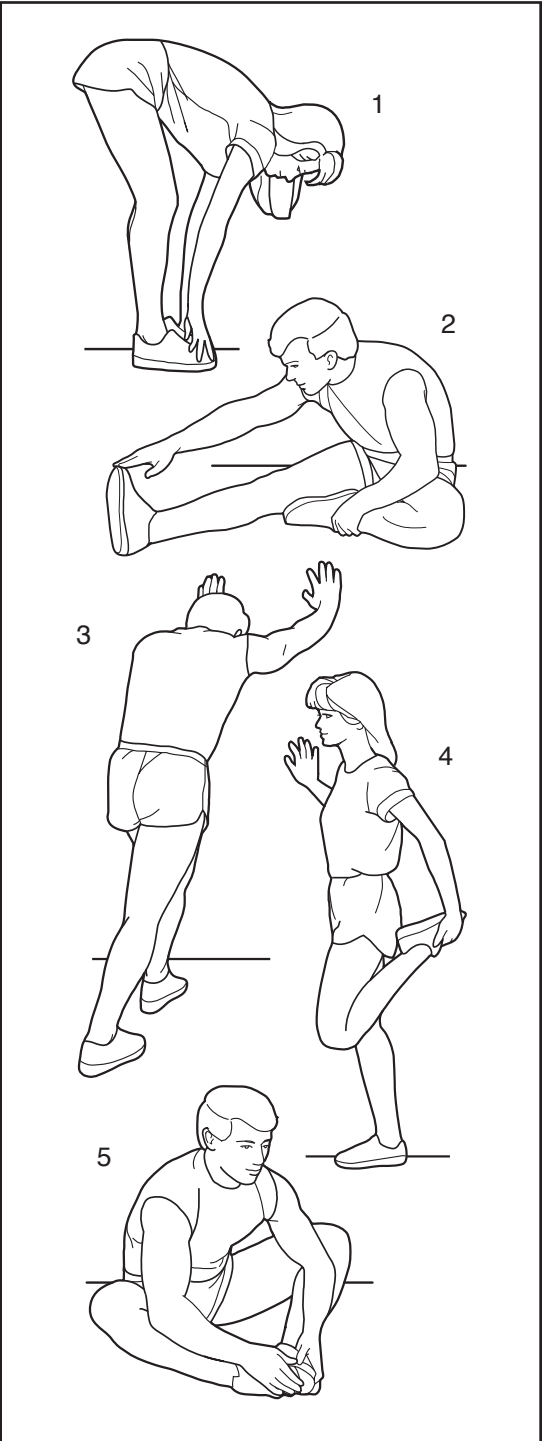

CONDITIONING GUIDELINES



**WARNING:** Before beginning this or any exercise program, consult your physician. This is especially important for individuals over the age of 35 or individuals with pre-existing health problems.

The pulse sensor is not a medical device. Various factors, including your movement, may affect the accuracy of heart rate readings. The sensor is intended only as an exercise aid in determining heart rate trends in general.

The following guidelines will help you to plan your exercise program. Remember—these are general guidelines. For more detailed information about exercise, obtain a reputable book or consult your physician.

EXERCISE INTENSITY

Whether you want to burn fat, strengthen your cardiovascular system, or increase your athletic performance, you can tailor your exercise to your specific goals. The key to achieving the desired results is to exercise with the proper intensity.

Burning Fat

To burn fat effectively, you must exercise at a relatively low intensity level for a sustained period of time. During the first few minutes of exercise, your body uses easily accessible carbohydrate calories for energy. Only after the first few minutes of exercise does your body begin to use stored fat calories for energy. If your goal is to burn fat, set the speed control on the console to FAT BURN to help you maintain the proper intensity level. (See pages 8 and 9.)

Aerobic Exercise

If your goal is to strengthen your cardiovascular system, your exercise must be “aerobic.” Aerobic exercise is activity that requires large amounts of oxygen for prolonged periods of time. This increases the demand on the heart to pump blood to the muscles, and on the lungs to oxygenate the blood. The proper intensity level for aerobic exercise can be found by using your pulse as a guide. As you exercise, your pulse should be kept at a level between 70% and 85% of your maximum possible heart rate. This is known as your training zone. You can find your training zone in the table at the top of this page. Training zones are listed according to age and physical condition.

Age	Training Zone (Beats/Min.)	
	Unconditioned	Conditioned
20	138-167	133-162
25	136-166	132-160
30	135-164	130-158
35	134-162	129-156
40	132-161	127-155
45	131-159	125-153
50	129-156	124-150
55	127-155	122-149
60	126-153	121-147
65	125-151	119-145
70	123-150	118-144
75	122-147	117-142
80	120-146	115-140
85	118-144	114-139

keep your pulse near the low end of your training zone as you exercise. After a few months of regular exercise, your pulse can be gradually increased until it is near the middle of your training zone as you exercise. You can measure your pulse using the pulse sensor. Exercise for about four minutes, and then measure your pulse immediately. If your pulse is too high or too low, adjust the intensity of your exercise. It may also be helpful to set the speed control on the console to AEROBIC to help you maintain the proper intensity level. (See pages 8 and 9.)

Performance Training

If your goal is high performance athletic conditioning, set the speed control on the console to PERFORMANCE to help you maintain the proper intensity level. (See pages 8 and 9.)

WORKOUT GUIDELINES

Each workout should include three parts: (1) a warm-up, (2) training zone exercise, and (3) a cool-down.

Warm-up

Warming up prepares the body for exercise by increasing circulation, delivering more oxygen to the muscles and raising the body temperature. Begin each workout with 5 to 10 minutes of stretching and light exercise to warm up (see SUGGESTED STRETCHES on page 15).

- readings. The pulse sensor is intended only as an exercise aid in determining heart rate trends in general.


18. Never leave the treadmill unattended whilst it is running. Always remove the key when the treadmill is not in use.

19. You must be able to safely lift 45 pounds (20 kg) to raise, lower, or move the treadmill.

20. When folding or moving the treadmill, make sure that the storage latch is fully closed.
21. Inspect and tighten all parts of the treadmill every three months.

22. Never insert any object into any opening.

23. Always unplug the power cord before performing the maintenance and adjustment procedures described in this manual. Never remove the motor hood unless instructed to do so by an authorised service representative. Servicing other than the procedures in this manual should be performed by an authorised service representative only.



**WARNING:** Before beginning this or any exercise program, consult your physician. This is especially important for persons over the age of 35 or persons with pre-existing health problems. Read all instructions before using. ICON assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

SAVE THESE INSTRUCTIONS

The decals shown below have been placed on your treadmill. If one of the decals is missing, or if it is not legible, please call our Customer Service Department to order a free replacement decal (see ORDERING REPLACEMENT PARTS on the back cover of this manual). Apply the decal in the location shown.



**WARNING!**

- Read all warning labels and user's manual before moving, storing, or operating treadmill.
- Storage latch must be fully engaged before treadmill is moved or stored.



- Never allow children to play on or around treadmill.
- You must be able to safely lift 45lb. (20kg.) to fold down or move this treadmill.

**Instructions For Lowering Treadmill**

- Firmly grasp top end of treadmill with the right hand.
- Use left hand to release treadmill by pulling up on latch and move treadmill slightly towards you.
- Grasp top end of treadmill with both hands and lower to the floor.






BEFORE YOU BEGIN

Thank you for selecting the PROFORM® CROSS-WALK csi treadmill. The CROSSWALK csi treadmill combines advanced technology with innovative design to let you enjoy an excellent form of cardiovascular exercise in the convenience and privacy of your home. And when you're not exercising, the unique CROSS-WALK csi can be folded up, requiring less than half the floor space of other treadmills.

For your benefit, read this manual carefully before using the treadmill. If you have additional questions,


please call our Customer Service Department at 0345-089009. To help us assist you, please note the product model number and serial number before calling. The model number is PETL21462. The serial number can be found on a decal attached to the treadmill (see the front cover of this manual for the location).

Before reading further, please review the drawing below and familiarise yourself with the labelled parts.

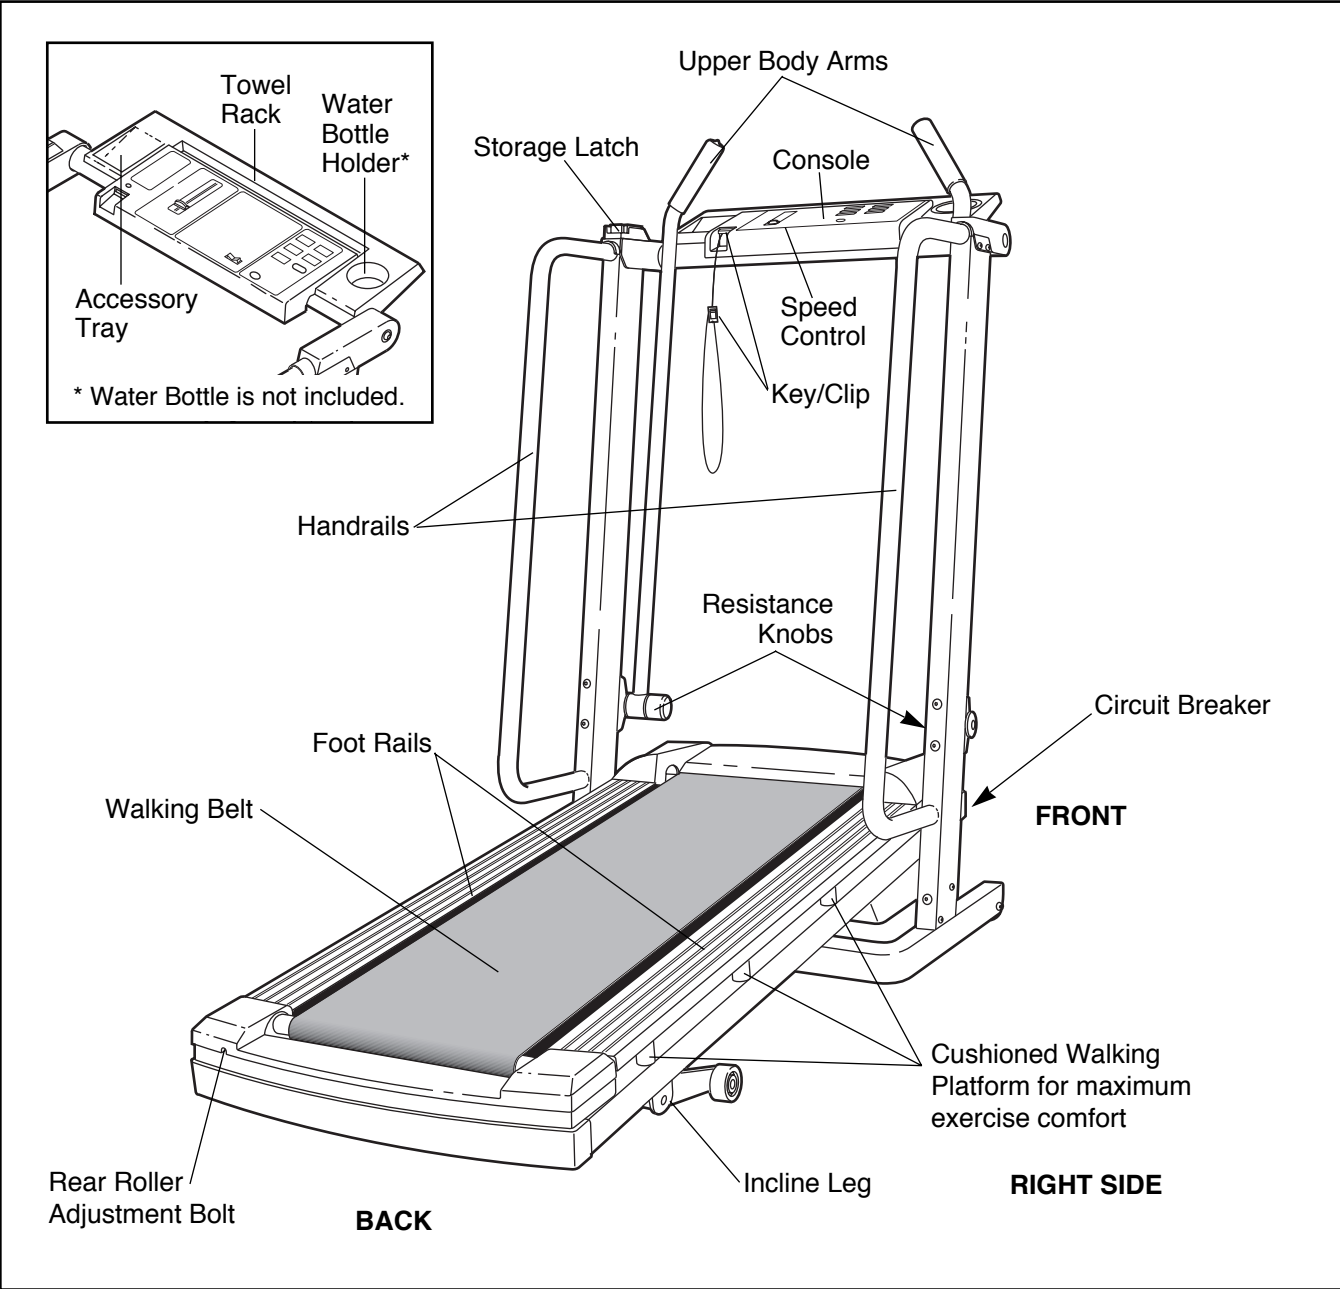


4. SYMPTOM: THE WALKING BELT IS OFF-CENTRE WHEN WALKED ON

- a. If the walking belt has shifted to the left, first remove the key and **UNPLUG THE POWER CORD**. Using the 3/16" end of the allen wrench, turn the left rear roller adjustment bolt clockwise 1/4 of a turn. Plug in the power cord, insert the key and run the treadmill for a few minutes. Repeat until the walking belt is centred.

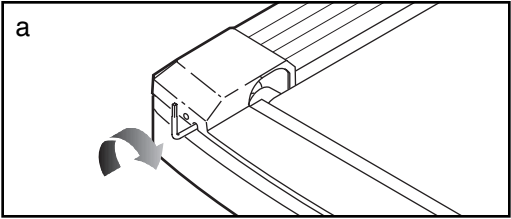


- b. If the walking belt has shifted to the right, first remove the key and **UNPLUG THE POWER CORD**. Using the 3/16" end of the allen wrench, turn the left rear roller adjustment bolt counterclockwise 1/4 of a turn. Plug in the power cord, insert the key and run the treadmill for a few minutes. Repeat until the walking belt is centred.

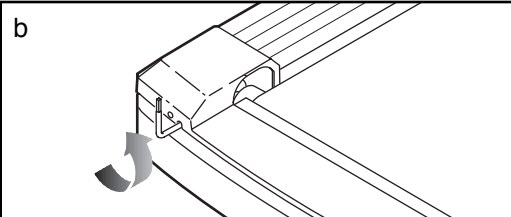


5. SYMPTOM: THE DISPLAYS OF THE CONSOLE DO NOT FUNCTION PROPERLY

- a. The console requires two "AA" batteries (not included); alkaline batteries are recommended. If the displays of the console do not function properly, the batteries should be replaced. Open the battery cover as shown below. Press two batteries into the battery compartment, with the negative (-) ends of the batteries touching the springs. Close the battery cover.

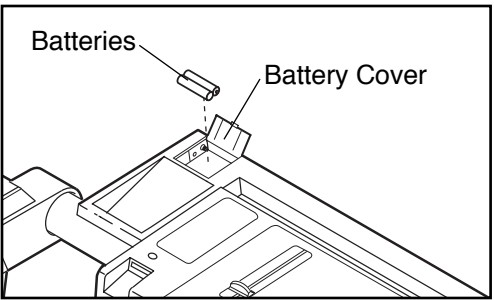

- b. If the speed display does not show a correct reading, remove the key and **UNPLUG THE**


**POWER CORD.** Remove the screws from the sides and front of the hood. Carefully remove the hood. Locate the reed switch and the Magnet (43) on the left side of the Pulley (21). Turn the Pulley until the Magnet is aligned with the Reed Switch. **Make sure that the gap between the Magnet and the Reed Switch is about 1/8" (3mm).** If necessary, loosen the Screw (33) and move the reed switch slightly. Retighten the Screw. Re-attach the hood and run the treadmill for a few minutes to check for a correct reading.

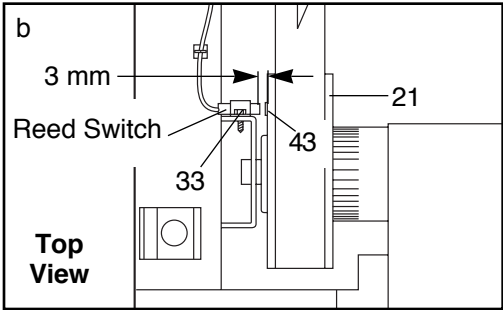

6. SYMPTOM: ONE OF THE UPPER BODY ARMS SQUEAKS DURING USE

- a. Correcting this problem requires a small amount of white marine grease, available at most department stores.


Turn the Resistance Knob (59) counterclockwise until it can be removed. Remove the Resistance Cone (60) and the Upper Body Arm (12), along with the 3/8" Flat Washers (65), Spring Washer (62), Thrust Washers (63), and Thrust Bearing (64). (Note: If the Resistance Sleeve [61] comes out of the Resistance Bracket [66], press it back in.) Apply a **thin layer** of white marine grease to the outer surface of the Resistance Cone (60). Reattach all parts in the order shown at the right.

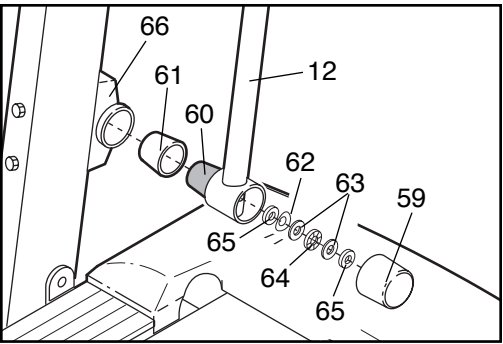

7. SYMPTOM: THE TREADMILL SITS UNEVENLY ON THE FLOOR

- a. Make sure that the seven base pads are attached to the treadmill (see assembly steps 1 and 6 on pages 5 and 6).

2. Hold the treadmill firmly with both hands, and lower the treadmill to the floor. **To decrease the possibility of injury, bend your legs and keep your back straight.**

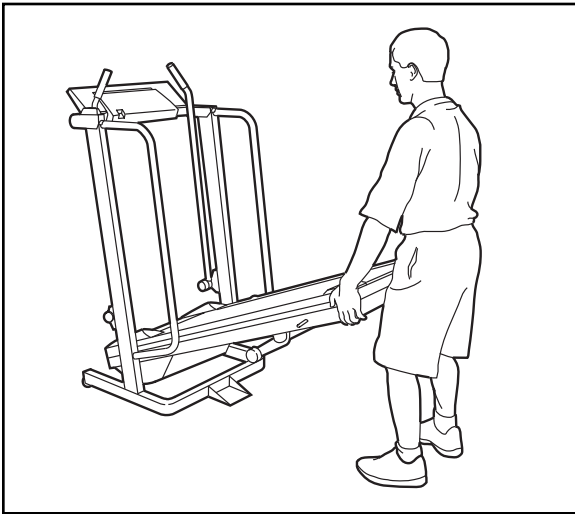


## TROUBLE-SHOOTING

Most treadmill problems can be solved by following the steps below. Find the symptom that applies, and follow the steps listed. If further assistance is needed, please call our Customer Service Department.

### 1. SYMPTOM: THE POWER DOES NOT TURN ON

- a. Make sure that the power cord is plugged into a properly earthed outlet. (See HOW TO PLUG IN THE POWER CORD on page 7.) If an extension cord is needed, use only a 14-gauge general-purpose three cord of cable of 1,5 meters (5 feet) or less in length.
- b. After the power cord has been plugged in, make sure that the key is fully inserted into the console. (See step 1 on page 8.)

- c. Check the circuit breaker located on the treadmill near the power cord. If the switch protrudes as shown, the circuit breaker has tripped. To reset the circuit breaker, wait for five minutes and then press the switch back in.

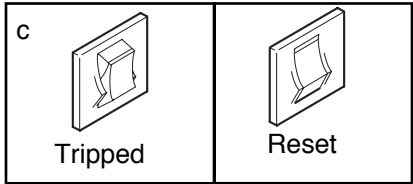




### 2. SYMPTOM: THE POWER TURNS OFF DURING USE

- a. Check the circuit breaker located on the treadmill frame near the power cord (see 1. c.). If the circuit breaker has tripped, wait for five minutes and then press the switch back in.
- b. Make sure that the power cord is plugged in.
- c. Remove the key from the console. Reinsert the key fully into the console. (See step 1 on page 8.)
- d. If the treadmill still will not run, please call our Customer Service Department.


### 3. SYMPTOM: THE WALKING BELT SLOWS WHEN WALKED ON

- a. If an extension cord is needed, use only a 14-gauge general-purpose three cord of cable of 1,5 meters (5 feet) or less in length.
- b. If the walking belt still slows when walked on, please call our Customer Service Department.


## ASSEMBLY

**Assembly requires two people.** Set the treadmill in a cleared area and remove all packing materials. Do not dispose of the packing materials until assembly is completed. **Tools required for assembly: The included allen wrench** , **your own phillips screwdriver** , and **two adjustable spanners** .

- 1. Attach six Base Pads (73) to the bottom of the Base (75) in the indicated locations (see the inset drawing). Note: One additional Base Pad will be used in assembly step 6, and one extra Base Pad is included.

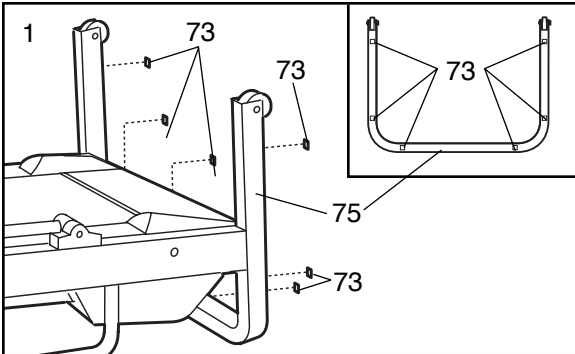


- 2. Firmly hold the Uprights (11, 58) as shown. Raise the Uprights until the Base (75) and the front Wheels (74) are resting on the floor.

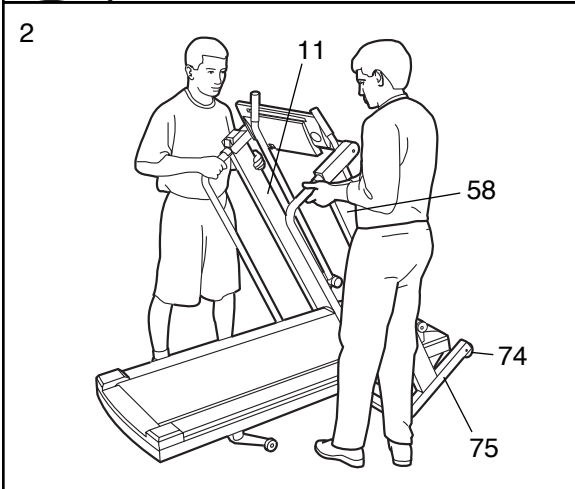


- 3. Loosen the Crossbar Bolts (2) in the ends of the Console Crossbar (17). Pivot the Console (6) to the angle shown. Look under the Left and Right Crossbar Brackets (4, 51) and find the two small holes in each end of the Console Crossbar (17). Tighten Crossbar Screws (9) into all four holes.

Rotate the Console (6) upward until it stops. Using the 7/32" end of the Allen Wrench (57), tighten the Crossbar Bolts (2) in the ends of the Console Crossbar (17).

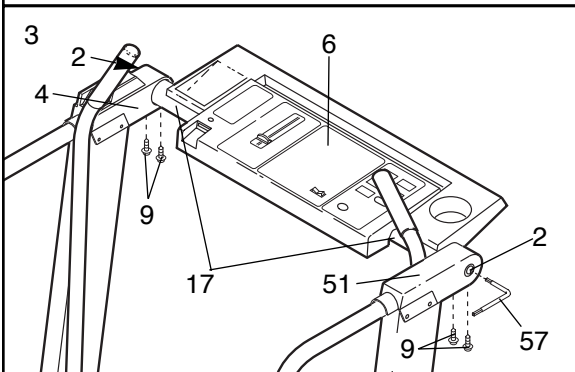

- 4. Next, the treadmill should be raised to the storage position. Hold the treadmill with your hands in the locations shown at the right. **To decrease the possibility of injury, bend your legs and keep your back straight. As you raise the treadmill, make sure to lift with your legs rather than your back.** Raise the treadmill about halfway to the vertical position.

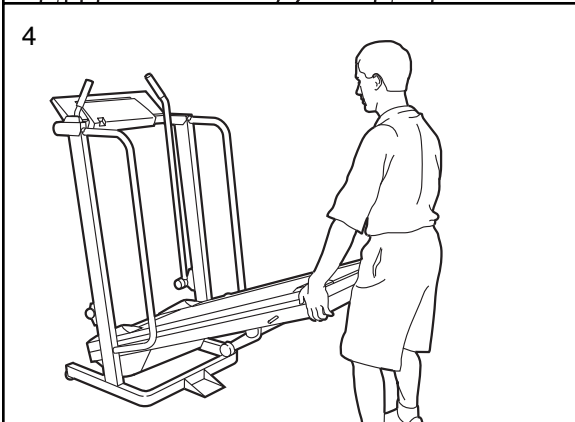

5. Move your right hand to the position shown at the right, and hold the treadmill firmly. Using your left hand, lift the storage latch. Raise the treadmill until the locking pin snaps into the storage latch. **Make sure that the locking pin is inside the storage latch, and that the storage latch is fully closed.**

6. See drawing 6B. Attach a Base Pad (73) to the bottom of the Stabiliser Plate (88) in the indicated location.

See drawing 6A. Stand behind the treadmill. Hold the Left Crossbar Bracket (4) and the Right Crossbar Bracket (not shown). Place one foot on the Base (75) in the indicated location. Tip the treadmill back slightly. Whilst the treadmill is held in this position, a second person should slide the Stabiliser Plate (88) onto the Base (see drawing 6C). Keeping your foot on the Base, carefully tip the treadmill up until it is resting on the Base. Make sure that the Stabiliser Plate (88) stays on the Base.

See drawing 6C. Attach the Stabiliser Plate (88) to the Base (75) with a Stabiliser Plate Bolt (105), two Washers (97), and the Stabiliser Plate Nut (95) as shown.


Before moving the treadmill, see HOW TO MOVE THE TREADMILL on page 11.

7. Refer to assembly drawing 5 at the top of this page. Hold the upper end of the treadmill with your right hand as shown. Using your left hand, lift the storage latch. Pivot the treadmill slightly until the locking pin is out of the storage latch.

Hold the treadmill firmly with both hands, and lower the treadmill to the floor. **To decrease the possibility of injury, bend your legs and keep your back straight.**

8. Remove the paper backing from the Adhesive Clip (44). Press the Adhesive Clip onto the Frame (84) in the indicated location. Press the Allen Wrench (57) into the Adhesive Clip. The use of the Allen Wrench is described on page 13.

Make sure that all parts are tightened before you use the treadmill. **Note: Place a mat beneath the treadmill to protect the floor or carpet.**

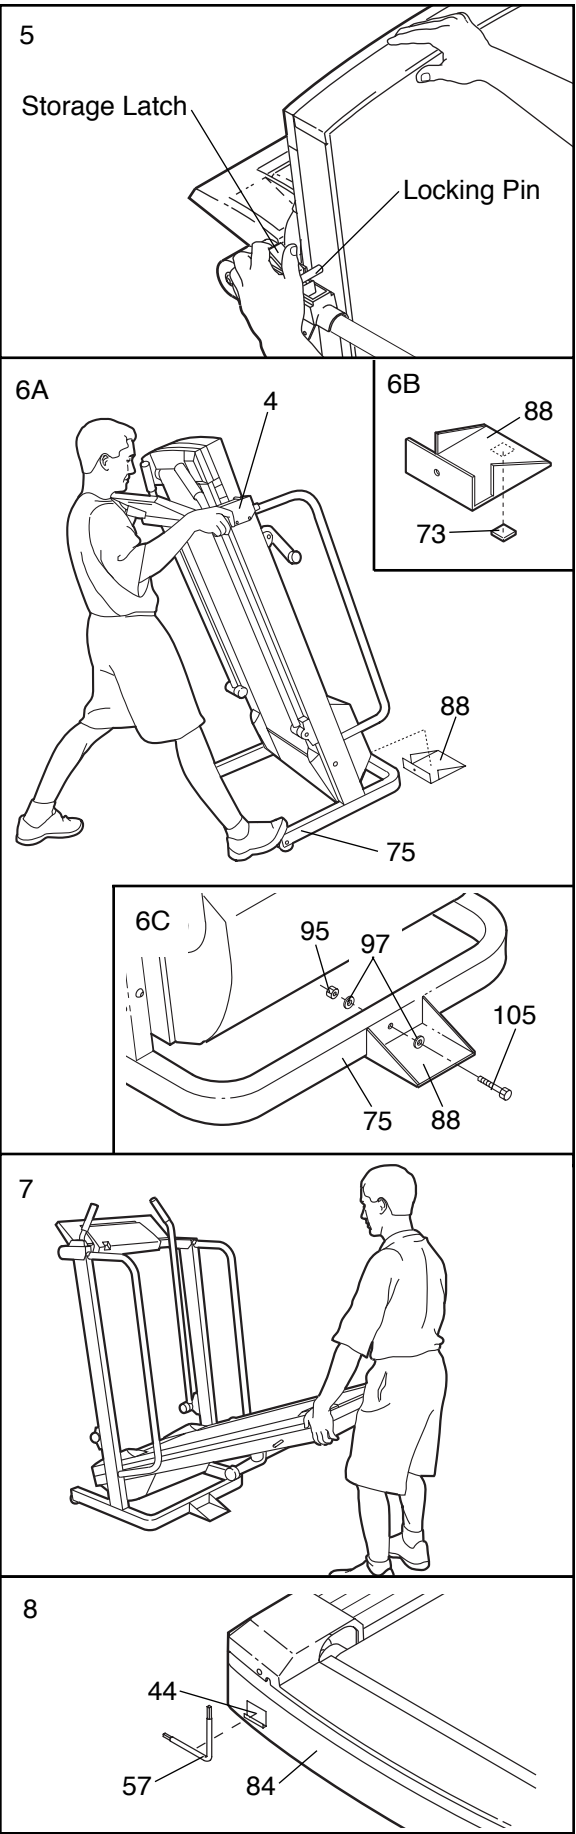

## HOW TO FOLD AND MOVE THE TREADMILL

### HOW TO FOLD THE TREADMILL FOR STORAGE

Before folding the treadmill, unplug the power cord. **Caution: You must be able to safely lift 45 pounds (20 kg) in order to raise, lower, or move the treadmill.**

1. Hold the treadmill, with your hands in the locations shown at the right. **To decrease the possibility of injury, bend your legs and keep your back straight. As you raise the treadmill, make sure to lift with your legs rather than your back.** Raise the treadmill about halfway to the vertical position.

2. Move your right hand to the position shown at the right, and hold the treadmill firmly. Using your left hand, lift the storage latch. Raise the treadmill until the locking pin snaps into the storage latch. **Make sure that the locking pin is inside the storage latch, and that the storage latch is fully closed.**

**To protect the floor or carpet from damage, place a mat under the treadmill. Keep the treadmill out of direct sunlight. Do not leave the treadmill in the storage position in temperatures above 34° C.**

### HOW TO MOVE THE TREADMILL

Before moving the treadmill, convert the treadmill to the storage position as described above. **Make sure that the locking pin is inside the storage latch, and that the storage latch is fully closed.**


1. Hold one crossbar bracket with each hand. Place one foot on the base as shown.

2. Tilt the treadmill back until it rolls freely on the front wheels. Carefully move the treadmill to the desired location. **Never move the treadmill without tipping it back, or the base pads may come off. To reduce the risk of injury, use extreme caution whilst moving the treadmill. Do not attempt to move the treadmill over an uneven surface.**

3. Place one foot on the base, and carefully lower the treadmill until it is resting in the storage position.

### HOW TO LOWER THE TREADMILL FOR USE

1. Hold the upper end of the treadmill with your right hand as shown. Using your left hand, lift the storage latch. Pivot the treadmill slightly until the locking pin is out of the storage latch.

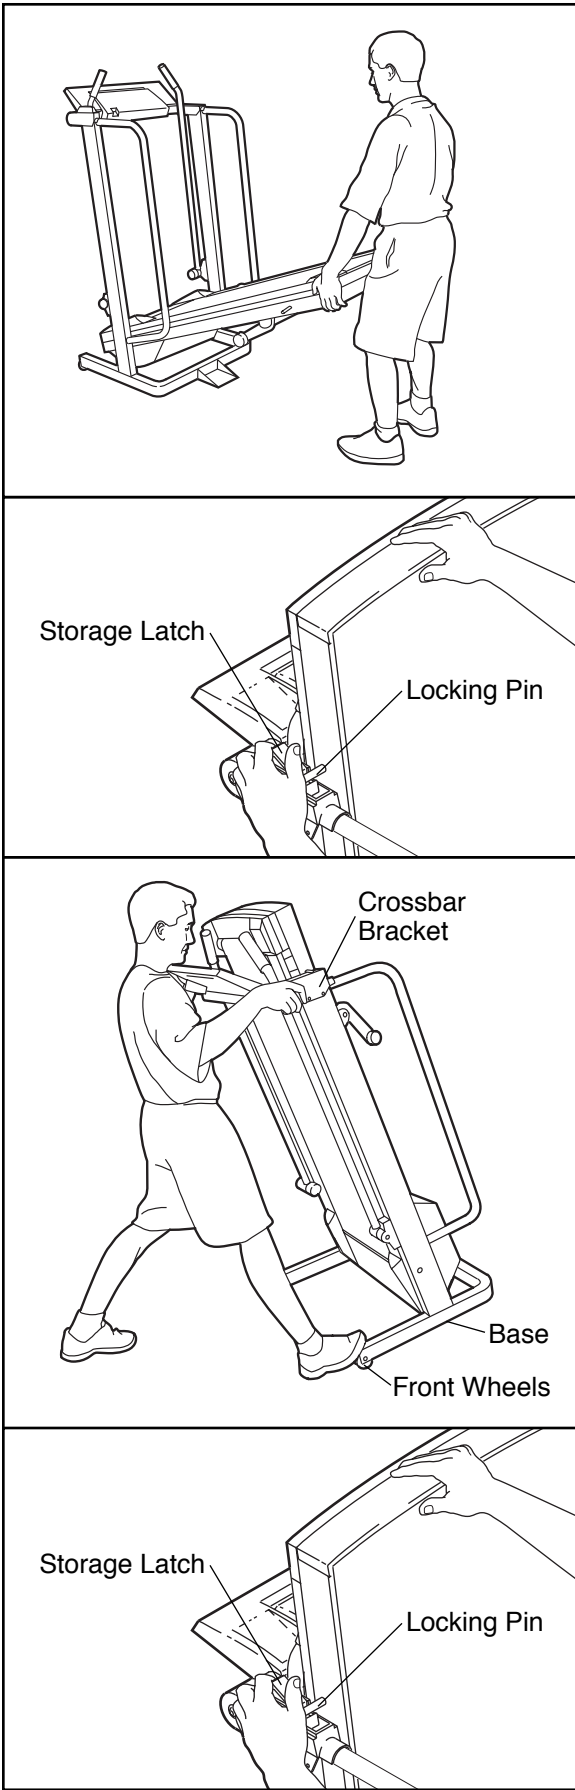




## 6 Change the incline of the treadmill, if desired.


To increase or decrease the incline, hold down the right or left side of the incline button.

Important: Do not change the incline of the treadmill by placing objects under the treadmill. Change the incline only as described above.

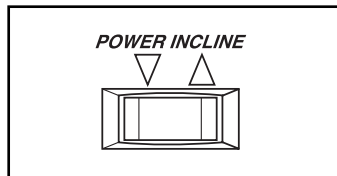

## HOW TO USE THE UPPER BODY ARMS

As you exercise on the treadmill, you can hold either the handrails or the upper body arms. The upper body arms are designed to exercise your arms, shoulders, and back for a total body workout. Hold one upper body arm with each hand, and move the arms forward and back as you walk on the treadmill.

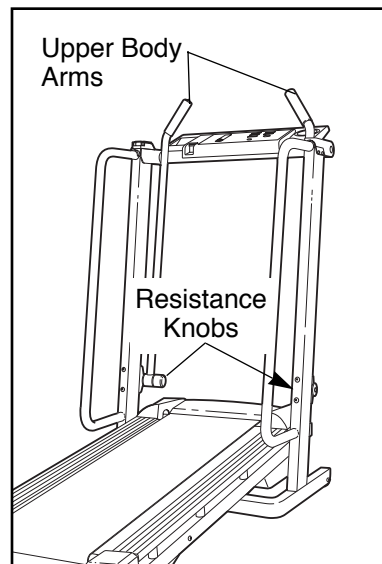

To vary the intensity of your upper body exercise, the resistance of the upper body arms can be adjusted. To increase the resistance, turn the resistance knobs clockwise; to decrease the resistance, turn the knobs counterclockwise.

# OPERATION AND ADJUSTMENT

## THE PERFORMANT LUBE™ WALKING BELT

Your treadmill features a walking belt coated with PERFORMANT LUBE™, a high-performance lubricant. **IMPORTANT:** Never apply silicone spray or other substances to the walking belt or the walking platform. They will deteriorate the walking belt and cause excessive wear.

## HOW TO PLUG IN THE POWER CORD

**This product must be earthed.** If it should malfunction or break down, earthing provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-earthing conductor and a earthing plug. **Plug the power cord into an appropriate outlet that is properly installed and earthed in accordance with all local codes and ordinances.**

**⚠ DANGER:** Improper connection of the equipment-earthing conductor can result in an increased risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly earthing. Do not modify the plug provided with the product—if it will not fit the outlet, have a proper outlet installed by a qualified electrician.



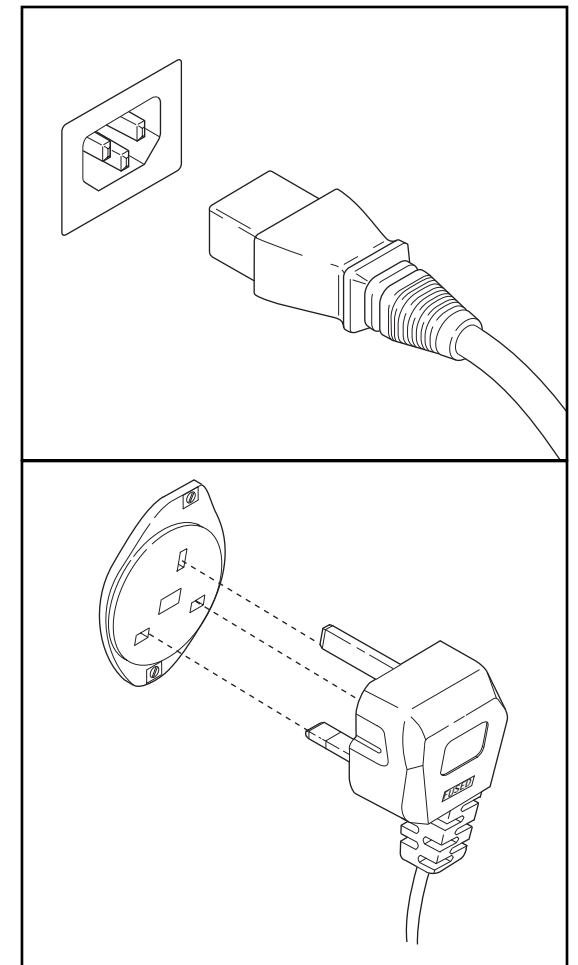


DIAGRAM OF THE CONSOLE

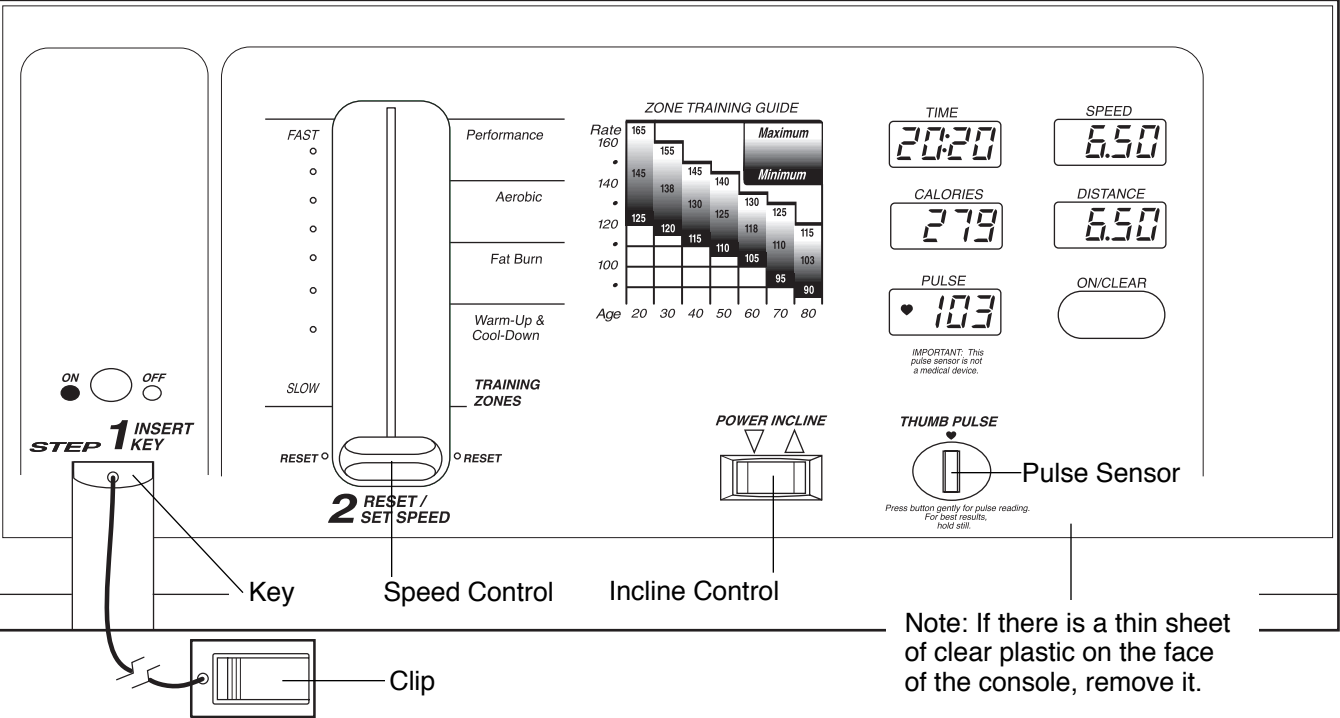

2 Reset the speed control and start the walking belt.

Slide the speed control down to the "RESET" position.  
**Note:** Each time the walking belt is stopped, the speed control must be moved to the "RESET" position before the walking belt can be restarted.

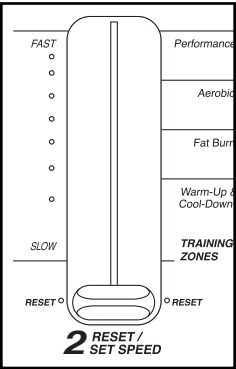

Next, slide the control up until the walking belt begins to move at slow speed.

Carefully step onto the walking belt and begin exercising. Change the speed of the walking belt as desired by sliding the speed control. To stop the walking belt, step onto the foot rails and slide the speed control to the "RESET" position.

3 Follow your progress with the monitor displays.

• TIME

This display shows the total length of time that you have exercised. When the walking belt is stopped, the TIME display will pause after a few seconds.



• SPEED

This display shows the current speed of the walking belt.




• CALORIES

This display shows the approximate number of Calories you have burned. Note: The actual number of Calories you have burned may differ slightly from the number shown, depending on the speed and incline of the treadmill.




• DISTANCE

This display shows the total distance you have walked or run.

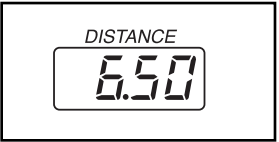


The displays can be reset, if desired, by pressing the ON/CLEAR button.

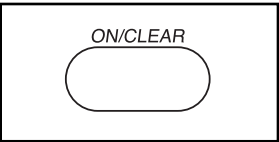


4 Measure your pulse, if desired.

To use the pulse sensor, stand on the foot rails and place your thumb on the pulse sensor as shown. The pulse sensor is pressure-activated. Fully press down the pulse sensor. **Do not press too hard, or the circulation in your thumb will be restricted, and your pulse will not be detected.** Next, slightly raise your thumb until the heart-shaped indicator in the PULSE display flashes **steadily**. Hold your thumb at this level. After 5 to 10 seconds, your pulse will be shown. Hold your thumb on the sensor for another 15 seconds for the most accurate reading. If the displayed pulse appears to be too high or too low, or if your pulse is not displayed, lift your thumb off the sensor and allow the display to reset. Press down again on the sensor as described above.

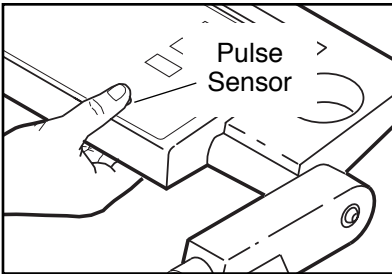


Make sure that your thumb is positioned as shown, and that you are applying the proper amount of pressure to the pulse sensor. Try the sensor several times until you become familiar with it. Remember to stand still whilst measuring your pulse.

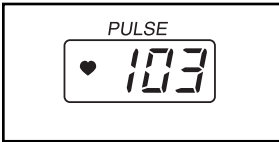

5 When you are finished exercising, stop the walking belt and remove the key.

Step onto the foot rails, stop the walking belt, and remove the key from the console. Store the key in a secure place.

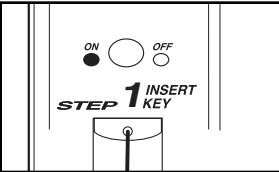


**Note:** After the key is removed, the displays will remain on for about four minutes.

**CAUTION:** Before operating the console, read the following precautions.

- Do not stand on the walking belt when turning on the power.
- Always wear the clip (see the drawing above) whilst operating the treadmill. When the key is removed from the console, the walking belt will stop.
- Adjust the speed in small increments until you are familiar with the treadmill.
- The training zones marked beside the speed control are general guidelines only. See pages 14 and 15 for more information.
- To reduce the possibility of electric shock, keep the console dry. Avoid spilling liquids on the console, and use only a sealed water bottle.

Press two batteries into the battery compartment, with the negative (–) ends of the batteries touching the springs. Close the battery cover.

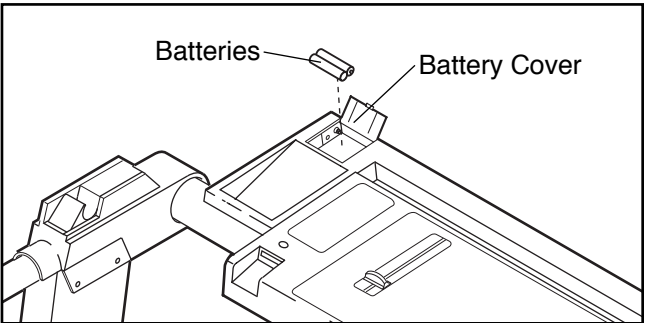


Next, step onto the foot rails of the treadmill. Find the clip attached to the key (see the drawing at the top of this page), and slide the clip onto the waistband of your clothing.

Follow the steps below and on pages 9 and 10 to operate the console.

1 Insert the key fully into the power switch.

Inserting the key will not turn on the displays. The displays will turn on when the ON/CLEAR button is pressed or the walking belt is started. Note: If you just installed batteries, the displays will already be on.

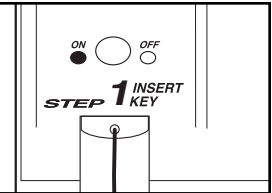



PART LIST—Model No. PETL21462

R0597A


Key Qty. No.	Description	Key Qty. No.	Description	Key Qty. No.	Description
1	8	Crossbar Bracket Screw	46	4	Wire Clip
2	2	Crossbar Bolt	47	1	Motor Mount Sleeve
3	2	Crossbar Washer	48	1	Electronics Bracket
4*	1	Left Crossbar Bracket	49	1	Controller
5	2	Foam Grip	50	1	Choke
6*	1	Console	51	1	Right Crossbar Bracket
7	8	Console Screw	52	1	Bracket Latch Pin
8	2	Wire Harness Grommet	53	1	Circuit Breaker
9	4	Crossbar Screw	54	1	Front Roller Adjustment Bolt
10	2	Cage Nut	55	5	Adjustment Washer
11	1	Rear Roller Guard	56	1	Console Bracket Latch
12	2	Upper Body Arm w/Foam	57	1	Allen Wrench
13	1	Key/Clip	58	1	Motor Pivot Bushing
14	1	Spring Sleeve	59	2	Resistance Knob
15	1	Upright Wire Harness	60	2	Resistance Cone
16	1	Frame Cover	61	2	Resistance Sleeve
17	1	Console Crossbar	62	2	Spring Washer
18	2	Crossbar Bracket	63	4	Thrust Washer
19*	1	Motor/Pulley/Flywheel/Fan	64	2	Thrust Bearing
20	1	Motor	65	4	3/8" Flat Washer
21	1	Pulley/Flywheel/Fan	66	2	Resistance Bracket
22	1	Water Bottle Holder Insert	67	2	Resistance Bolt
23	1	Potentiometer	68	1	Rear Hood
24	1	Speed Knob	69	2	Upright Pivot Bolt
25	1	Motor Belt	70	2	Incline Leg Bolt
26	6	Nut	71	3	Cover Clip
27	3	Motor Tension Bolt	72	1	Upright Plug
28	3	Motor Mount Washer	73	8	Base Pad
29	5	Star Washer	74	4	Wheel
30	1	Releasable Wire Tie	75	1	Base
31	2	Upright Washer	76	1	Frame Plug
32	1	Front Hood	77	4	Resistance Bracket Bolt
33	8	Hood Anchor Screw	78	2	Foot Rail
34	1	Motor Tension Nut	79	1	Receptical
35	1	Tie Holder Clamp	80	1	Large Motor Washer
36	8	Rubber Hood Anchor	81	33	Safety Cover Screw
37	1	Latch Warning Decal	82	1	Safety Cover
38	4	Crossbar Screw (top)	83	1	Electronics Warning Decal
39	1	Motor Swivel Bolt	84	1	Frame
40	4	Incline/Motor Pivot Nut	85	1	Base Shock
41	1	Ground Wire Screw	86	8	Isolator
42	1	Incline Switch	87	2	Belt Guide
43	1	Magnet	88	1	Stabiliser Plate
44	2	Adhesive Clip	89	2	Upright Pivot Nut
45	26	Screw	90	1	Front Roller/Pulley
			91	1	Walking Platform
			92	1	Walking Belt
			93	8	Platform Screw
			94	1	Left Rear Roller Adj. Bolt
			95	1	Stabiliser Plate Nut
			96	1	Tension Spring
			97	2	Washer
			98	4	Resistance Bracket Washer
			99	1	Incline Extension
			100	1	Incline Motor Guard
			101	2	Guard Spring
			102	1	Roller Tension Nut
			103	1	Rear Roller Guard Plate
			104	1	Rear Roller
			105	1	Stabiliser Plate Bolt
			106	1	Incline Motor
			107	1	Incline Motor Bolt
			108	1	Motor Star Washer
			109	1	Filter
			110	8	Isolator Cover
			111	1	Filter Bracket
			112	4	Wheel Bolt
			113	1	Right Rear Roller Adj. Bolt
			114	1	Incline Leg
			115	1	Reed Switch Wire
			116	5	8" Wire Tie
			117	1	Ground Wire Nut
			118	1	Circuit Breaker Bracket
			119	1	Reed Switch Clamp
			#	1	8" White Wire, 2 Female
			#	1	8" Blue Wire, 2 Female
			#	1	14" White Wire, Male/Female
			#	1	4" Green/Yellow Wire, Ring/Connector
			#	1	4" Black Wire, 2 Female
			#	1	4" Black Wire, Male/Female
			#	1	User's Manual
			#	1	8" Black Wire, 2 Female
			#	1	8" Black Wire, Male/Female

\* Includes all parts shown in the box.

# These parts are not illustrated.

REMOVE THIS EXPLODED DRAWING  
AND PART LIST FROM THE MANUAL

Save this EXPLODED DRAWING and PART LIST for future reference.

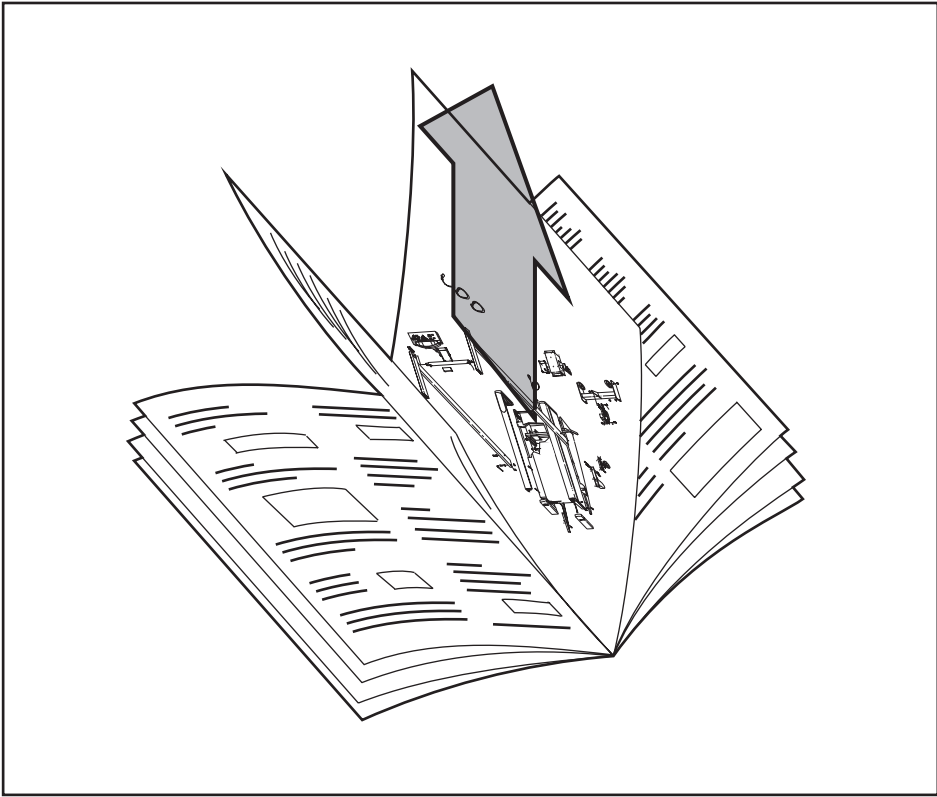

Note: Specifications are subject to change without notice. For information about ordering replacement parts, see the back cover of the User's Manual.

EXPLODED DRAWING—Model No. PETL21462

R0597A

